PORTABLE VIDEO CASSETTE SYSTEM
Traveler

T3500
Quick Reference Guide

Remote Functions & CONTROLS

Always point the Remote Control directly at the VCR Remote Sensor.

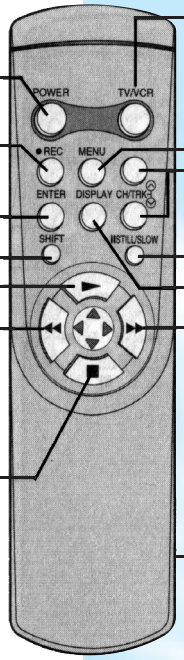

POWER
Turns VCR on and off.

REC
Starts recording.

ENTER

SHIFT

PLAY
Press to begin playback.

REW
Rewinds tape from stop mode.

STOP
Stops tape movement.

TV/VCR
Ejects cassette when playing.

MENU
Selects menu.

CHANNEL UP/DOWN
Switches between VCR/ Line 1(disabled)/ Line 2

TRACKING UP/DOWN
Adjusts cassette tracking.

STILL(Pause)/Slow
Selects variable slow motion playback.

DISPLAY

FF
Fast forwards tape from stop mode.

Battery Compartment
(on back, two AA batteries)

Remote Replacement P/N: 9100-0140-400

NOTE: VCR does not have TV Tuner.

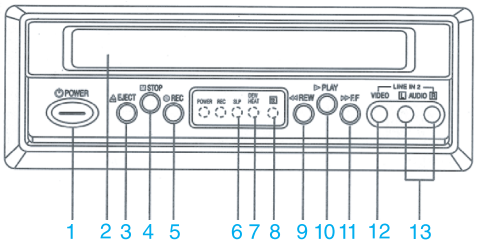

To listen to audio using headphones, plug them into the headphone jacks and adjust the volume:
- Right headphone jack: eliminates external speakers/headphones only
- Left headphone jack: audio to headphones and speakers

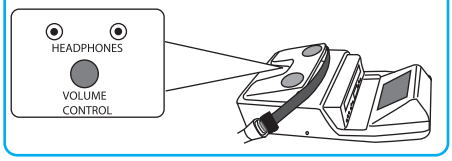

VCR Functions & CONTROLS

1. **POWER BUTTON**
   Press to turn the VCR on/off
2. **CASSETTE COMPARTMENT**
   Insert a video cassette
3. **EJECT BUTTON**
   Press to eject
4. **STOP BUTTON**
   Press to stop a tape
5. **REC BUTTON**
   Press to record an external signal
6. **SP/SLP INDICATOR**
   Illuminated when VCR is recording in SLP mode
7. **DEW / HEAT INDICATOR**
   When DEW/HEAT is blinking and displayed on-screen, the VCR will go into standby until the conditions return to normal. This can take between 5-10 minutes in normal conditions.
8. **REMOTE SENSOR**
9. **REW BUTTON**
   Press to rewind in stop mode or reverse search in play mode
10. **PLAY BUTTON**
    Press to begin video cassette playback
11. **FF BUTTON**
    Press to fast forward in stop mode or forward search in play mode
12. **VIDEO IN RCA JACK**
    Use to input video signal from connected equipment
13. **AUDIO IN STEREO RCA JACKS (LINE IN 2)**
    Use to input audio signal from connected equipment. Press CH▼/▲button to select

ROSEN
UNLIMITED VISION

9000128 Rev. A

Key Functions & Controls

Power for the VCR
To provide power for the VCR:
Plug the power connector into the cigarette lighter in your automobile dash and to the front of the T3500.

Playing a Video Cassette Tape
1. Load a video cassette tape. The VCR powers on automatically.
2. Press the PLAY button on the VCR or press ▶ on the Remote.
3. To stop playback, press STOP on the VCR or ■ on the Remote.

Fast Forward and Reverse Functions
While a video cassette tape is playing:
- Press the FF button on the VCR or ▶▶ on the Remote to fast forward.
- Press the REW button on the VCR or ◀◀ on the Remote to search backward.
- Press and hold the buttons to Jet Search at high speed. Release the button to return to normal playback. Audio is muted during Jet Search.

Still and Frame Advance Functions
While a video cassette tape is playing:
- Press II STILL/SLOW on the Remote to pause.
- Press II STILL/SLOW on the Remote repeatedly to advance frame by frame. Press PLAY ▶ to return to normal playback.
- Press and hold II STILL/SLOW on the Remote to advance in slow motion over two seconds. Press PLAY ▶ to return to normal playback.

Recording Video Cassettes
The T3500 can record video cassette tapes from auxiliary inputs such as a video camera, DVD, or game.
To record a video tape:
1. Insert a video cassette (be sure the record protect safety tab is in place).
2. Press CH/TRK ▲ or ▼ to select the A/V jack LINE2).
3. Press REC on the Remote or the VCR. The REC indicator will light.
4. Press II STILL/SLOW on the Remote to pause recording. Press II STILL/SLOW again to resume recording.
5. Press STOP on the VCR or ■ on the Remote to stop recording.

Video Tracking
Video heads must align with the recorded cassette track for best results. This alignment is called tracking. This VCR automatically adjusts tracking when you insert a video cassette. Some manual adjustment may be necessary. To manually adjust tracking while a video cassette tape is playing:
1. Press CH/TRK ▲ or ▼ on the Remote until the picture improves.

T3500 *Quick Reference Guide*

Menu Options
Control menu options for the T3500 using the Remote:
- Press MENU to view and hide the menu.
- Press SHIFT to select a menu option.
- Press ENTER to cycle through the choices for the selected menu option. The menu automatically disappears after 10 seconds if no selections are made.

Record Speed
The T3500 can record at two tape speeds: Standard Speed (SP), or Slow Speed for Super Long Play (SLP). To change the speed used to record a video:
1. Press MENU. The Record Speed menu option is selected.
2. Press ENTER repeatedly to change from SP to SLP.
3. Press MENU to hide the menu.

Auto Repeat
The T3500 will automatically repeat playback of a video cassette tape. To choose between automatic repeat of the video or stopping at the end of the tape:
1. Press MENU.
2. Press SHIFT until Auto Repeat is selected.
3. Press ENTER repeatedly to turn Auto Repeat (ON) or (OFF).
4. Press MENU to hide the menu.

Auxilary Inputs & Optional Components

Optional Auxilary Sources:
- Video Game Systems
- Video Camera
- DVD

To connect:
1. Insert RCA jacks into the VCR from A/V (LINE2) inputs. The system automatically switches to LINE2.
2. Supply power, as shown.

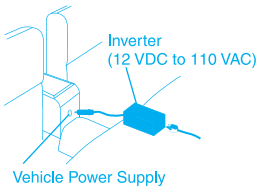

Playstation® is a registered tradename of Sony Corp. / Nintendo® is a registered tradename of Nintendo. / Sega® is a registered trademark of Sega Corp.

ROSEN UNLIMITEDVISION
www.rosenproducts.com
1-800-284-7677
9000128 Rev.A